

Übersicht PoE-Injektoren EnGenius

PoE-Injektor	EPD-4824 ¹⁾	EPE-1212 ²⁾	EPE-24R ³⁾	EPE-4818 ⁴⁾	EPE-48GR ⁵⁾	EPE-5818Gaf ⁶⁾	EPA5006GP ⁷⁾	EPA5006GAT ⁸⁾
Access Point								
ENH1750EXT					X			
ENH220EXT					X			
ENS1750							X	
ENS202	X	X						
ENS202EXT	X	X						
ENS500	X	X						
ENS500EXT	X	X						
EnStation2	X	X						
EnStation5	X	X						
EnStationAC				X	X	X		X
EnStation5-AC				X	X	X		X
EAP350v2				X		X		X
EAP1750H								X
EAP1200H								X
ECB1750								X
ENH202v2	X	X	X					
ENH500v2	X	X	X					
EWS300AP				X		X		X
EWS310AP				X		X		X
EWS320AP				X				X
EWS350AP				X				X
EWS360AP				X				X
EWS370AP				X				X
EWS371AP				X				X
EWS510AP							X	X
EWS660AP								X
EWS860AP				X				X
EWS870AP								X
EWS870AP								X

1)

Konverter von 802.3af/802.3at

2) 3) 4) 5) 6)

Proprietär

7)

802.3af

8)

802.3at

From:

<https://wiki.holzfeind.ch/> - Wiki Holzfeind

Permanent link:

<https://wiki.holzfeind.ch/doku.php/engenius/poe>

Last update: 2020/08/09 10:46

